

ASSEMBLY INSTRUCTION

MALONE SHOE RACK

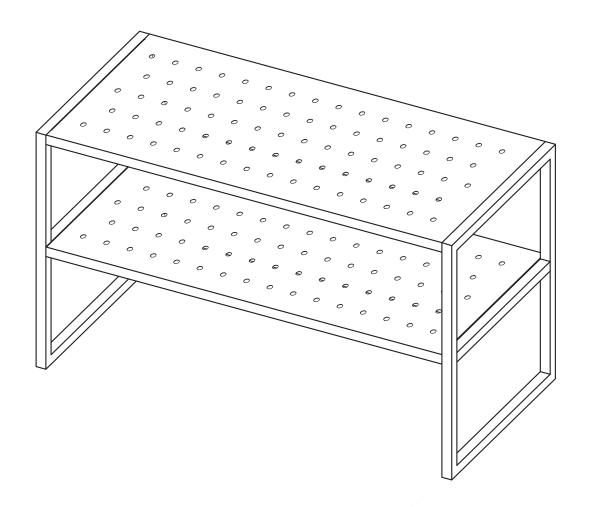

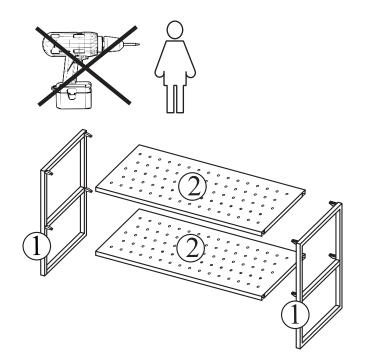



		_
NO	PARTS	Q'TY
1		2
2		2
А	M6 x 12	8
В	M6	1
С		4

